

GREY BAG

Design: Tineke Pot, the Netherlands

Pattern 1:2

CUT

Cut the bag pieces in organdy and Fiberglass Window Screen. The organdy is the outside fabric and the fiberglass Window Screen the lining.

MARKING

Dashed lines on the pattern pieces indicate stitching lines and other pattern markings to wrong side of fabric pieces.

You can also make small clips in the seam allowance at positions of horizontal marks.

OPTIONAL EMBROIDERY

Select design 23 on your Husqvarna Viking Embroidery Machine. Mark the placement of the embroideries with a pictogram pen on the organdy front and back pieces.

Hoop the fabric with Dissolve-A-Way™ stabilizer. Optional: Place Puffy foam on top for a thicker three-dimensional embroidery.

Thread your Husqvarna Viking sewing machine with Sulky Embroidery thread. We used Sulky colors in following order for our Embroideries: 1166, 1011, 1192, 8050.

Embroider the design on the front and back pieces of the bag.

SEW

Lay bag pieces together, right sides facing. Stitch side edges together. Press seams open.

Baste lower edges of bag to bottom

piece, right sides facing, matching seam and matching side seams to horizontal marks.

Stitch.

Press seam allowances toward bottom piece.

Topstitch bottom close to

attachment seam.

Pin Fiberglass Window Screen in bag, wrong sides facing, and baste upper edges together.

Turn bag so that Fiberglass Window Screen is on outside. At curved upper edge, stitch each short seam from slit mark toward side.

Secure ends of seams.

Press seams open. Clip

seam allowances at upper edges (zipper) several times. Turn upper

edge to Fiberglass Window Screen side and baste.

Press edges.

Lay strap pieces together, right sides facing.

Stitch long edges together. Trim seam

 


 


 
allowance. Turn strap right side out. Baste edges, press, and topstitch close to edges.

Clip seam allowances of bag front and bag back into corner at each horizontal mark (arrow).

Fold one corner of bag so that upper seam lies on side seam. Slide one end of strap into corner. Stitch across corner, catching strap.

Stitch second end of strap to opposite corner in same manner, making sure that strap is not twisted.

Baste zipper under slit edges so that zipper teeth are covered and stitch in place, using zipper foot.

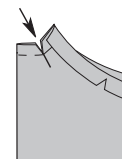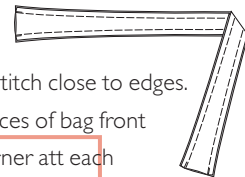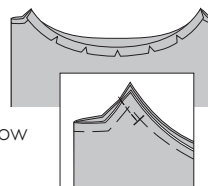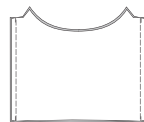

SEWING SUPPLIES

- Husqvarna Viking Sewing/Embroidery machine
- 1 roll Fiberglass Window Screen, available at home stores, DIY or hardware stores
- 15 3/4" (40 cm) organdy
- One zipper 10" (25 cm) long
- Sulky embroidery thread color numbers; 1166, 1011, 1192, 8050

- Matching color sewing thread
- Dissolve-A-Way™ Stabilizer
- Puffy Foam
- Embroidery card/disk/d-Card 43, Design Winners by Swedish Art Students
- Pictogram Pen (412 08 38-48)

3/8" (1 cm) seam allowance included in all measurements.

